



PREMIER CONVENTIONAL REPEATER PANEL CONNECTION DETAILS

1. Install the Zonal output PCB (Supplied with the repeater) into the Premier SX or Premier Elite 4-8 Control Panel. Connect the Zonal Output Card ribbon cable to connector CONN 4 on the Control panel's Display PCB.

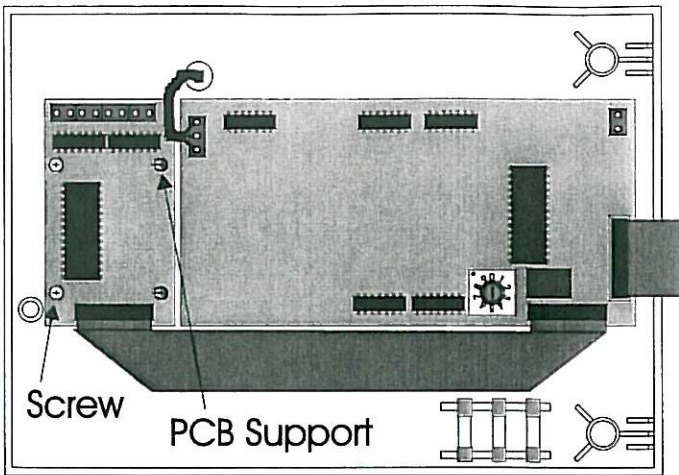


2. Connect the zonal output card to the repeater as shown in the table below.

(PLEASE NOTE THAT THIS REPEATER NEEDS 5 COMMON CONNECTIONS TO THE PANEL, PLUS ONE CONNECTION PER ZONE.)

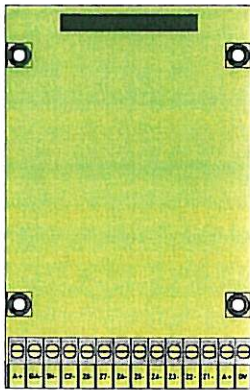

ZONAL OUTPUT CARD

REPEATER TERMINAL	FUNCTION	ZONAL OUTPUT CARD
A+	AUXILIARY POWER +VE	A+
-GA	COMMON ALARM	GA-
-TN	BUZZER	TN-
-CF	COMMON FAULT	CF-
-Z1	ZONE 1 -VE REPEAT	Z1-
-Z2	ZONE 2 -VE REPEAT	Z2-
-Z3	ZONE 3 -VE REPEAT	Z3-
-Z4	ZONE 4 -VE REPEAT	Z4-
-Z5	ZONE 5 -VE REPEAT	Z5-
-Z6	ZONE 6 -VE REPEAT	Z6-
-Z7	ZONE 7 -VE REPEAT	Z7-
-Z8	ZONE 8 -VE REPEAT	Z8-
0V	AUXILIARY POWER 0V	0V

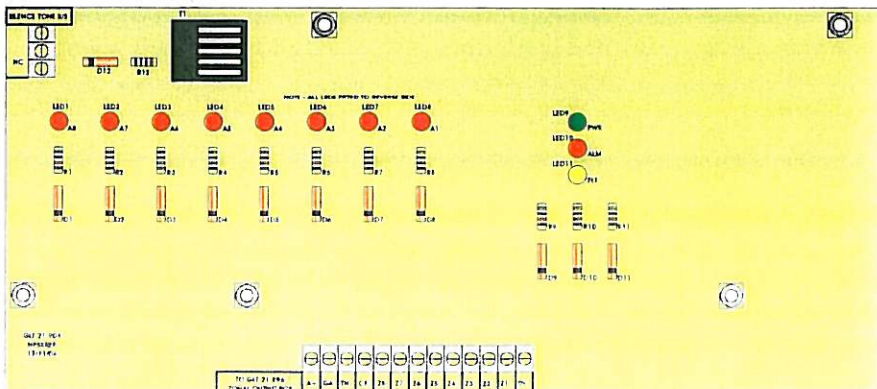

REPEATER PCB CARD