


## PRE-REP Premier Repeater Panel



The Premier Repeater panel is a hard-wired repeater panel for use with the Premier SX (all sizes), and the Premier Elite (4-8 zones)

It is display only (no controls), and indicates power, general fault, general fire, and the zone in alarm. It also has an internal buzzer to indicate that it requires attention.

It comes supplied with an interface card to connect to the Premier SX and Premier Elite (4-8 zone) panels.

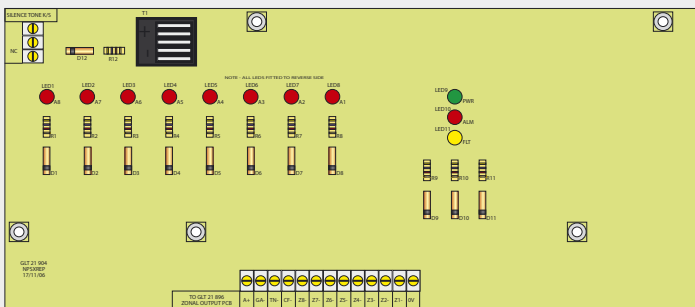

MODEL	PRE-REP	
PART NO	37-045	
SUPPLY VOLTAGE	20 - 35 V DC	
SYSTEM VOLTAGE	29V DC (NOMINAL)	
CONNECTIONS	A+ 0V GA- CF- TN- Z1- TO Z8-	SUPPLY +VE SUPPLY -VE GENERAL ALARM COMMON FAULT TONE (BUZZER ACTIVE) ZONAL ALARM
OPERATING TEMPERATURE	-0° C to 50° C	
ENCLOSURE SIZE	355 x 275 x 100mm	
WEIGHT	1 KG	