



Agrippa pillow fire alarm

The Agrippa pillow fire alarm uses 'listen and learn' technology to alert deaf or hard of hearing people if the fire alarm sounds while they are sleeping.


How does it work?




1 The unit is placed on the bedside table and pillow pad is placed under the pillow.



2 Using 'listen and learn' technology, the device learns the sound of the building's fire alarm.

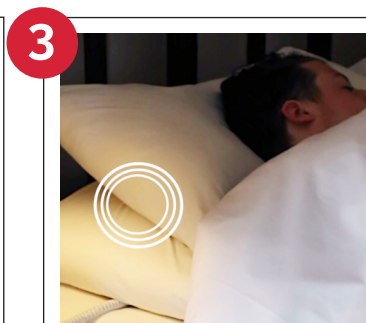

3 The Agrippa pillow fire alarm recognises the sound of the fire alarm and the pillow pad vibrates.

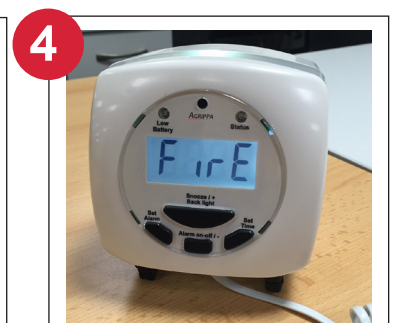

4 High intensity LEDs will flash and the screen will display "FIRE."

Benefits

- Portable device - battery powered and wire-free
- 'Listens and learns' the sound of your fire alarm
- No installation
- Flashing white LED visual warning
- Time display with alarm clock function
- Uses standard AA batteries
- Visual warning of low battery
- Enables accommodation providers to meet requirements of the Equality Act

Technical specification

- Battery operated (includes two C-cell batteries)
- 4 x AA batteries
- L-120mm x W-120mm x D-90mm
- Weight 380g

Watch how the Agrippa pillow fire alarm works on YouTube!